

QUICK REFERENCE GUIDE

- Smoke at a slow controlled rate for maximum smoke (vapour) rather than short quick inhaling
- If there is no smoke replace the battery first, not the inhaler (cartridge)
- If still there is no smoke after replacing the battery, then replace the inhaler (cartridge)
- If there is still no smoke (vapour) charge both batteries.
- Pull and reinsert the cartridge at times to make sure the remaining liquid contacts the Atomiser
- Position the E-cig with the light tip facing upwards to prevent the liquid in cartridge oozing out & leak
- Store the cartridge with the opening upwards ensure liquid does not flow out
- If the cartridge becomes too tight to remove, use a mini rubber mat to pull the cartridge gently but firmly.
- Loosen the contact between the atomisers & e-cig batteries when not in use. This will preserve the battery life.
- The components are sensitive micro electronics. Handle with extreme care. Do not drop the electronic components.
- If the battery is not charging, change the source of charger. Either use the USB stick charger or PCC, vice versa. Swap batteries charging options.

- If the PCC is not charging E-cig battery: ensure the PCC is fully charged. If still not charging, charge the e-cig battery with wall charger attached to PCC or use the USB stick charger
- If cartridge emits liquid directly into the mouth: The atomiser may not be hot enough or not powered. Ensure e-cig battery has power. Smoke at a slower, mild rate.
- To ensure that your Electronic cigarette last longer, occasionally clean the e-cig battery's & atomiser's contact point (screw like) with a cotton bud. Do not use water.
- There may be some residue in the atomizer, occasionally hold the other tip of the atomizer (with heating element) with a tissue paper or clean cloth and blow hard the other end (screw end). This will clean off the atomiser against any residue.

LIMITED WARRANTY STATEMENT

SmokerHaven Electronic Cigarette is a sensitive micro electronic components. Please handle with extreme care.

What is covered by this warranty.

This warranty expires one year from the date of purchase by customers. If the buyer discovers within this period a failure of the product to conform to specifications,

or a defect in material or workmanship, the buyer must promptly notify seller or exchange the product with the same model or compatible at SmokerHaven Customer Service Centre. In no event may that notification be received by Seller later than 12 months from the date of purchase. This warranty only covers defects in Electronic components only such as failure of battery, PCC, charger, USB & Atomiser.

What is not covered by this warranty.

Seller does not warrant any product, components, or parts not manufactured by SmokerHaven. Damage caused by use of the product for purposes other than those for which it was designed. Damage caused by disasters such as fire, flood etc. Damage caused by unauthorized attachments or modifications; or any other abuse or misuse by the purchaser. Damage caused by excessive rough handling and sudden shock caused to the Electronic component. Damage to the physical state of the Non-Electronic part of the SmokerHaven Electronic components

Any individual under 18, pregnant women and those sensitive to nicotine are not allowed to purchase or use SmokerHaven Electronic Cigarette



SmokerHaven

USER MANUAL

SmokerHaven.Com

SmokerHaven Electronic Cigarette is a device that looks like a cigarette, feels like a cigarette, tastes like a cigarette, but it isn't a cigarette. It's just a healthy way to enjoy smoking! It gives smokers a real "smoking" experience without the dangerous chemicals, carcinogens, fire, tobacco, tar, carbon monoxide, ash or smell found in real cigarettes.

There are no side effects. It is not detectable by smoke detectors! Besides authentic cigarette flavour, smokers have the option of smoking fun flavours such as Strawberry & vanilla. These fun flavours feel just like smoking shisha without the hassle and hazards of shisha. The E-Cigarette is also perfect gift for anyone.

How To Use SmokerHaven Electronic Cigarette

The first step is to open up the box. Inside your E-Cigarette starter kit, you will find:

- 1 Portable Charger Case (PCC), which holds 4 cartridges & charges your E-cig batteries on the go without cords when the PCC itself is fully charged.
- 2 E-cig batteries
- 1 Atomiser
- 1 UK standard wall plug adapter (For the USB charger cord or USB Charger Stick)
- 1 USB Charger Cord to charge the PCC
- 1 USB Charger Stick to charge your E-cig battery directly

Set Up/Initial Use

- For optimal performance, it is recommended that you fully charge the batteries and E-Cig pack before using.
- You will notice that the atomiser is pre-assembled along with an empty cartridge. Simply replace the empty cartridge with a full one by placing it firmly onto the atomiser.
- There is no on or off switch. As you put the E-Cig to your lips and inhale, the orange LED light at the E-Cig tip glows like a real cigarette to let you know it's working.

Charging The Portable Charging Case (PCC)

- The PCC has a built-in battery in it to refresh your E-cig battery on the go!
- The Portable Charger Case (PCC) can be charged using a standard wall outlet.
- You may charge the PCC with the E-cig smart battery attached to the PCC to allow simultaneous charging
- Optimum PCC charging time is 4.5 hours.
- When you press the PCC LCD button, the LCD screen on the PCC will indicate the PCC power level. A fully charged PCC can refresh the depleted E-Cig batteries up to 4 times full recharge.

Charging the E-cig Battery using PCC

- The right most compartment inside the PCC, is a battery receptor.
- The unique thing about the E-Cig pack is that it doubles as a battery charger

- Screw the battery into the receptor until it is secure. Simply press the PCC LCD right button and hold for 3 seconds, the E-cig battery LED will blink. The E-cig battery will now be charged.
- Charging your E-Cig battery to capacity takes approximately 2 hours.

Charging the E-cig Battery using USB Stick Charger

- Charging the E-cig battery using USB stick charger.
- Connect the USB stick charger into the computer USB port or the UK AC charger adapter.
- Screw the battery into the receptor until it is secure.
- Optimum charging time is 2 hours. Do not exceed 2 hours charging the E-cig battery.

Replacing The Batteries

- Each battery should provide approximately two cartridges worth of full-flavored enjoyment between charges while your E-Cig pack will refresh your batteries up to 4 times before requiring a recharge.
- When the battery is depleted, the orange LED at the end of the battery will blink 8 times intermittently.
- To replace the empty battery, secure the cartridge in one hand and unscrew the battery from the atomiser.
- Grab the fresh battery from your E-Cig pack and reattach it to the atomiser. When you're finished,

- recharge the empty battery by screwing it back into the receptor. Remember to unscrew a newly charged battery from the receptor when the light goes out.
- Note: During use, the LED light will flash 10 times to warn you that you are overusing your E-Cig and you should take a break. This does not affect performance and does not mean you should recharge.

Replacing The Cartridge

- On average, each individual cartridge supplies enough nicotine and premium flavoring to accommodate approximately 120 puffs. When the cartridge no longer produces vapor, you'll know it's time for a replacement. Change the battery first before changing the cartridge.
- To replace the cartridge, hold the battery with one hand and pull off the empty one.
- Check the atomizer for any foil residue and gently blow it off.
- Firmly apply a full cartridge to the atomizer, twist it slightly to make sure it is secure.

